
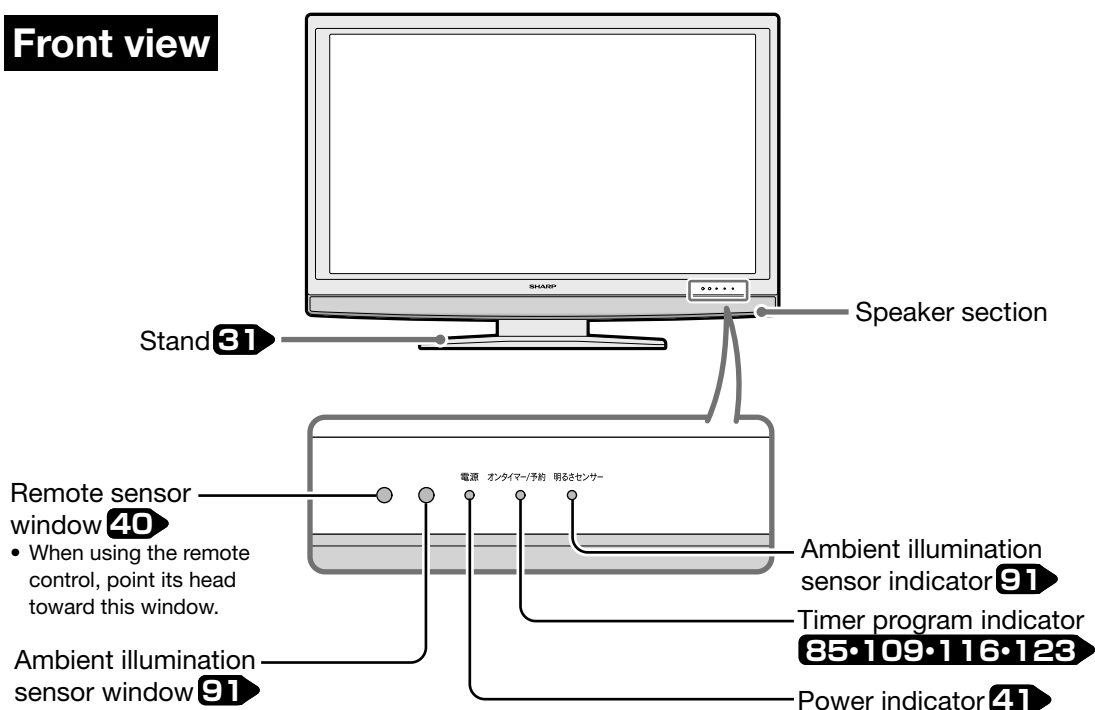


# Part Names - Main Unit English Guide

- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.

## Front view



### Adjusting the LCD panel angle **17**

- The LCD panel can be rotated horizontally up to 20° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

## Control panel

### Right side view


Main power switch **41**

Menu button **42**

Input / TV select (Enter) button **103**

Channel up (^) / down (v) buttons

Volume up (+) / down (-) buttons

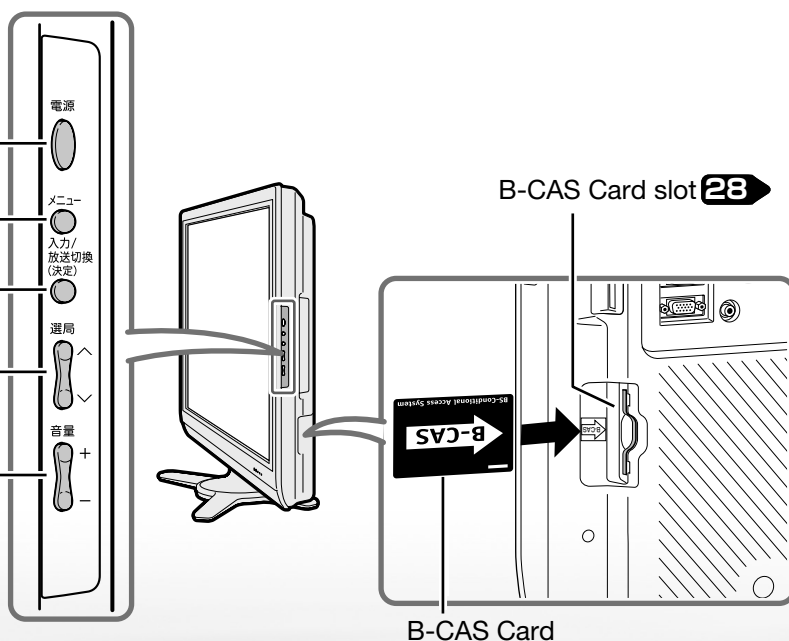

## Back view

LAN jack  
(10BASE-T/100BASE-TX)

**145**

Connect the telephone line

Telephone line jack **145**

Connect a Blu-ray Disc player,  
AV amplifier, etc.

AV in 1 and 2 (HDMI)

**36・101・102・  
119・128・132**


AV in 6

**101・112・128・131**

AV in 4 **36・101・128**

RS-232C **140**

AV in 7 (PC) **133**

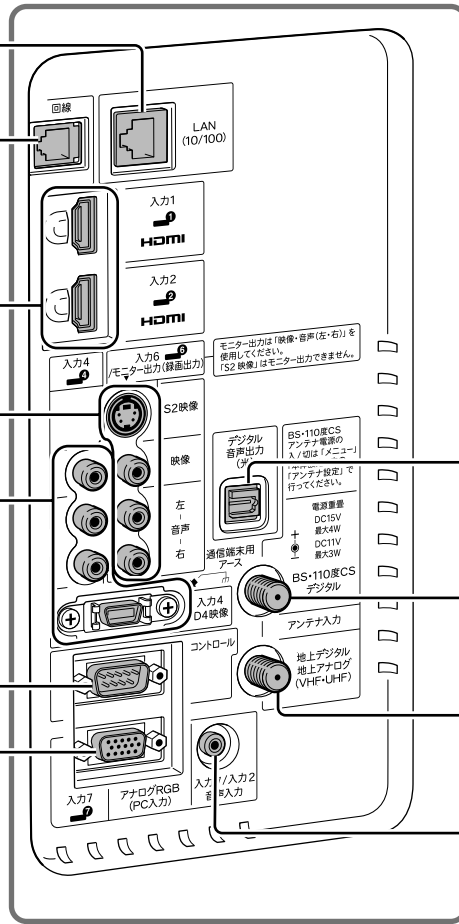

Digital audio  
output jack  
(optical) **119・130**

BS-CS 110 antenna  
input terminal  
**32~35**

VHF-UHF antenna  
input terminal  
**32~35**

PC input (audio)  
**132**

AV in 3 (HDMI)




**36・101・102・  
119・128・132**

AV in 5

**36・101・128**

Connect a video game  
equipment,  
video camera, etc.

Headphones jack

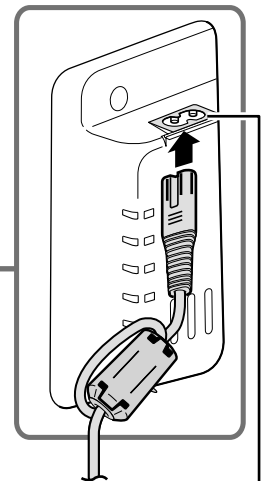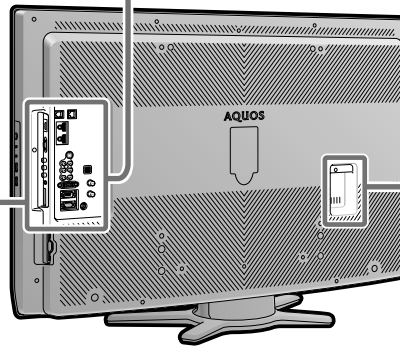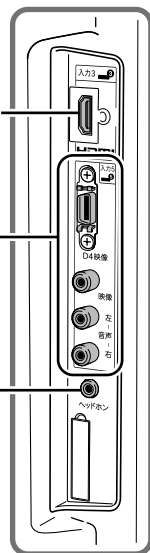

Connect the AC cord

AC cord connector  
(AC 100V) **37**

The provided power  
connector may have  
different shape from that  
shown in the drawing.

はじめに

準備

番組を見る

リモコンで  
チャンネルや  
音量などを  
操作する

ファミリンク  
で録画・再生

本機の機能の  
活用

故障かな仕様  
寸法図など

English

Guide

# Part Names - Remote Control Unit

## Active/Standby **41**

Press to engage the TV set in the active or standby mode.

## CATV **72**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

## Terrestrial digital select **68**

## BS select **68**

## CS select **68**

## Terrestrial analog select **68**

Select the CS digital channel for the first time. **47**

## Linked data broadcast **72 • 84**

Press to call the data broadcast linked with the current digital TV program.

## Volume up (+)/down (-) **69**

Press to adjust the volume.

## Mute **69**

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

## Program info **76 • 83**

Press to display detailed information on the current digital program.

## EPG **74 • 76**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

## Other on-air programs **75**

Press to display the EPG for currently on-air programs only (裏番組).

## Finish **42**

Press to finish menu operation, etc.

\* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

## Screen mode **87**

Press to select the desired screen mode.

## AV mode select **89**

Press to select the picture/sound setting that best matches the current program.

## Freeze **82**

Press to freeze the picture.

## Favorite channel select/register **71**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

## Familink **122 • 124~127**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

## Display **70**

Press to display or turn off the channel call, etc.

オフタイマー

## Sleep timer **160**

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

3桁入力

## Digital channel number input **71**

Use to select a digital channel by entering the 3-digit channel number.

## Familink **122**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

## Channel select **69**

- Press to select a channel.
- Use to input a number for various settings.

選局

## Channel up (^)/down (v) **69**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

\* CATV channels are factory set to be skipped.

メディア

## Media select **68 • 72**

Press to select the desired media (TV or data).

入力切替

## Input select **103**

Press to select the desired input.

## Menu **42**

Press to display or turn off the menu screen.

*The menus can be displayed in English. See **187** for instructions on how to switch the display language.*

## Cursor (up, down, left, right) **42**

Use to select a menu item, column, etc.

決定

## Enter/Confirm **42**

Press to confirm a selected setting or menu item.

## Return **42**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

## Color **76 • 77**

Use to operate EPGs and data program screens.

映像切替

## Picture select **81**

Press to select the desired picture when watching a digital multi-picture program.

字幕

## Caption **81**

Press to display, select, or turn off captions when watching a digital program with captions.


音声切替

## Audio select **80 • 81**

Press to select the desired audio.

## To open the cover

Hold the cover by the projections on both sides and lift upwards.

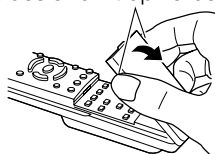


See page 68 for how to select a program.

# Switching the Display Language to English メニューなどの言語を英語にする

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。

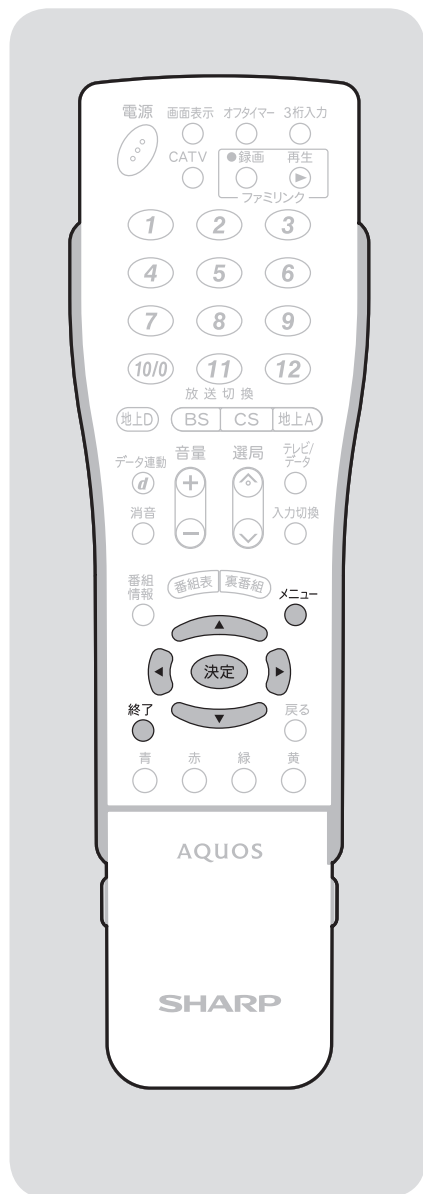

## 1

Display the menu screen.  
メニューを表示する

Press  
メニュー


## 2

Select “本体設定” (Setup) –  
“Language (言語設定)” and Enter.

「本体設定」 – 「Language (言語設定)」  
を選ぶ

Select with  
決定

Press  
決定

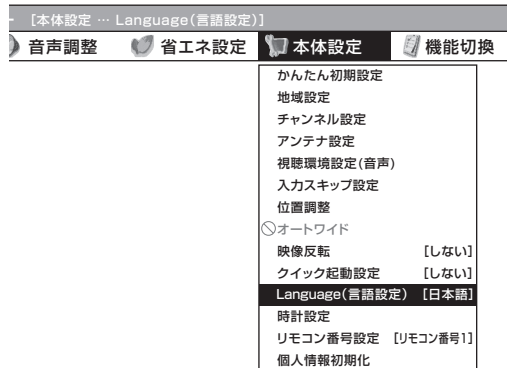


## 3

Select “English” and Enter.

「English」を選ぶ

Select with  
決定

Press  
決定

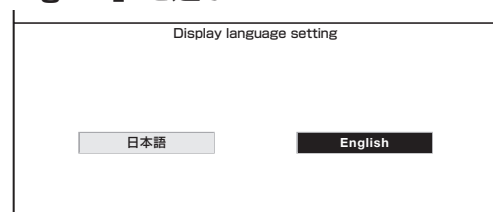

- The menu screen is now displayed in English.
- 画面表示が英語になります。

## 4

Finish this operation.

終了する

Press  
終了

おしらせ

誤ってメニューを英語にしてしまったときは

- メニューから「Setup」 – 「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

はじめに

準備

番組を見る

リーダーや！  
パソコンなど

ファミリー  
で録画・再生

本機の機能の  
活用

故障かな仕様  
寸法図など

English  
Guide